

## How often should I change engine oil?

<https://bekomcar.com/en/qa/t1z358dq2/>



Engine oil change interval depends on your own vehicle. The best is to refer to your vehicle's Maintenance Schedule. Normally, car manufacturers recommend oil change in every 10,000km.

However, I prefer changing engine oil in every 5,000km or twice a year.

For engine oil filter and air filter, it would be best to change them every time engine oil change is done. Although, air filter and oil filter change interval of 10,000km~20,000km seems more realistic.

## Notes & References

1. <https://owners.honda.com/vehicles/information/2020/Accord-Sedan/manuals>
2. <https://www.toyota.com/owners/resources/warranty-owners-manuals>
3. <https://www.mbusa.com/en/owners/manuals>
4. <https://www.bmwusa.com/owners-manuals.html>

## Tutorial

🔗 Low engine oil pressure 🔗 Engine oil filter 15400-RAF-T01 🔗 8th Gen Civic 1.8L Engine oil change 🔗 How to check the engine oil level using the dip stick 🔗 Engine oil 101, essentials you need to know

## 🗨️ Comments

크러시 와서도 꼭 함께 새로 교환하는것이 권장된다. 너무 재활용을 많이하면 드레인플러그에 넣어붙어, 추후 누유원인이 될 수 있기때문이다. .

*Dec. 14, 2021, 4:05 p.m., #C87, (sun.joo.moon)*

차를 평생가져가야 겠다고 생각하면 6개월 혹은 5천키로에 합성유로, 물론 규격에 맞는 엔진오일로 교환하기를 추천합니다. 10,000km 혹은 20,000km 교환 주기는 전문가의 세심한 상황판단하에 이루어져야 할 것입니다. 엔진계통, 특히 윤환 및 압력과 누유등에 영향을 줄 수 있습니다. .

*Oct. 12, 2021, 9:47 a.m., #C38, (@sunjoo.moon)*

Author 🗨️ SunJoo Moon , Edit Date: Oct. 10, 2021, 12:12 p.m.

⚠️ **Disclaimer !** All cars are different, so please read the service manual for your vehicle before any repair work. bekomcar assumes no liability for property damage and/or injury incurred directly and/or indirectly as a result of any of the information contained in the website. Use this information at your own risk.