

[Honda, Engine oil]

8th Gen Civic 1.8L Engine oil change

<https://bekomcar.com/en/tutorial/pdf/23/>

⚠ Do not over tighten the drain plug. It could cross thread the plug.

Torque for 17mm engine oil drain plug is 39Nm. Purchase 5W-20 or 5W-30 oil or your favorite engine oil. Aluminum crush washer size is M14 with 2mm in thickness.



Honda manual requires you to replace the engine oil filter and air filter in every 20,000 km. Use your common sense, inspect the air filter and replace them appropriately. Also, try to use genuine Honda engine oil filter. This process is for engine oil only and does not replace engine oil filter or the air filter.

For 8th generation Civic 1.8L, required engine oil volume is 4L.

(1) Simple engine oil replacement steps



Drain the existing engine oil-



Measure the drained engine oil-



Prepare the same volume of engine oil-









Put new engine oil using the funnel-



Double check the engine oil level-

Related contents & Comments

1.  Engine oil filter 15400-RAF-T01
2.  How to check the engine oil level using the dip stick
3.  Engine oil 101, essentials you need to know
4.  엔진오일 캡 여는 방법
5.  터보 직분사엔진(TDI), API SP이나 ILSAC GF-6 등급 엔진오일을 사용한다.
6.  Lexus RX350 엔진오일 교환

오일교환 주기는 차량별 엔진상태 및 운행환경드를 생각하여 조정하는것도 좋겠다. .

Feb. 18, 2022, 3:07 p.m., #C359, (@sunjoo.moon)

 SunJoo Moon , Edit Date: Aug. 14, 2021, 3:08 p.m.

⚠Disclaimer ! All cars are different, so please read the service manual for your vehicle before any repair work. bekomcar assumes no liability for property damage and/or injury incurred directly and/or indirectly as a result of any of the information contained in the website. Use this information at your own risk.